 


PASTA COOKER USER MANUAL

Please read before starting.
There are important explanations for you.

E AMP-360 E AMP-460 E AMP-660

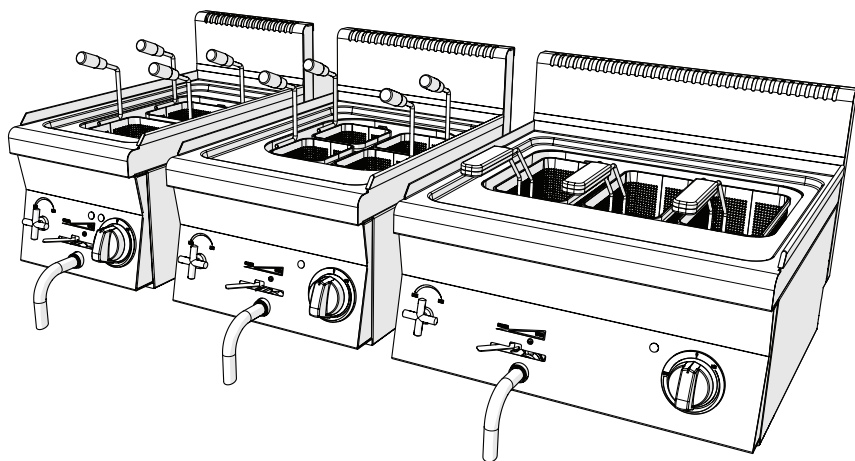

CONTENT

Technical Information Tables	3
General warnings and security measures	4-5
Setup	6
Operation and use.....	7-8
Basic and technical specifications	9-10
Electrical Connections	11-12-13
Cleaning and maintenance	14-15
Spare Parts List	16



If you want to dispose of the product, it is the social responsibility of individuals to deliver it to valid collection points. In this way, you help prevent possible negative consequences for the environment and human health by ensuring that the product is destroyed correctly. Recycling materials will help conserve natural resources.



The packaging materials of the product are manufactured from recyclable materials in accordance with national environmental legislation. Do not dispose of packaging materials with household waste or other waste. Take these materials to recycling points designated by local authorities.

Quality controls were carried out in accordance with the norms of CE, ISO 9001-en standards.

GENERAL INFORMATION

Model	E AMP-360	E AMP-460	E AMP-660
Product dimensions (cm)	30x60x30	40x60x30	60x60x30
Net weight (kg)			
Water Closure (Lt)	10 lt min; 12 lt max	12 lt min; 15 lt max	22 lt min; 25 lt max
Thermostat Working Range	30 °C min; 90 °C max	30 °C min; 90 °C max	30 °C min; 90 °C max

ELECTRICAL INFORMATION

Voltage	400 v	400 v	400 v
Electric power	3,5 Kw	5 Kw	7,5 Kw
Amp	15 A	22 A	34 A
Cable Cross Section	5x2,5	5x2,5	5x2,5
Frequency	50-60 hz	50-60 hz	50-60 hz
Protection class	IPX4	IPX4	IPX4
Min / max internal humidity	70%/85%	70%/85%	70%/85%
Cable input	PG16	PG16	PG16
Control type	Manuel	Manuel	Manuel

General warnings and security measures

Dear customer, we wish you to use your product in the best way, which is manufactured by undergoing careful and detailed quality checks. We strongly recommend that you read the full user guide before using the product. This guide will help you use the product quickly and safely.



The following safety instructions will help protect you from the risk of personal injury or damage to your product. If these instructions are not followed, the product will not be covered by the warranty and no responsibility for human health will be accepted.

- * Make sure that flammable materials that may cause fire are not located near the device.
- * Keep your device in a dry environment and air it well. Use a hood to remove steam and smoke from cooking.
- * Do not close the top perforated sheet of the device and keep it clean.
- * Installation and maintenance of the device should be carried out only by qualified personnel. Contact an authorized person authorized by the manufacturer. Otherwise, your device will be excluded from the warranty.
- * Replace the damaged parts of the device with the original spare parts. The manufacturer undertakes that the device can be used safely only when these parts are used.
- * Children and uninformed persons should not be allowed to use the device. It should be used by people trained in the risks associated with the device.
- * Keep the device under constant control while it is running.
- * Turn off the device if it malfunctions or malfunctions.
- * The device must have a ground line and a leakage current relay.
- * Chlorine(sodium hypochlorite, hydrochloric or muriatic acid, etc.) to clean the device.) do not use products containing (even diluted). Do not use metal tools to clean rust. First wipe with a damp cloth and then dry.
- * Do not store gasoline or flammable liquids near this device.
- * Do not allow oil to come into contact with plastic parts.
- * Do not clean the device directly with water jets or water vapor.
- * Do not allow dirt, oil, food or other waste to form sediment in the device, do regular cleaning.
- * Make the electrical connection of the device through a fuse corresponding to the values and secure the fuse in question in a place where you can easily access it. You can find the values from the label on the device or from the table inside the grid.
- * The device's electricity must be strictly grounded; the device must not be connected when there is no ground line.
- * The device is recommended to be checked by an authorized person. Call a service for this purpose at least every 12 months.

General warnings and security measures



- Always follow applicable safety instructions.
- Keep the user's guide in a place that you can easily access for future use, understanding its importance, and do not lose it.
- The manufacturer reserves the right to make changes to the product. It clearly states the differences between the models.

Contact your authorized dealer if you have any problems.



A warning sign indicating that caution is required for safe use.



Extreme temperature and this is a warning sign to act according to the environment.



A warning sign indicating a high voltage Hazard.

- Stainless steel material is used in the device.
- The device is designed for industrial type use under the Low Voltage Directive (LVD 2014/35ED).
- Your device is manufactured for use in restaurants, restaurants, fastfoods, canteens, tourist facilities, cafes, hotels and other environments where accommodation is made.

Setup



- Always install the product to an Authorized Service. The manufacturer is not responsible for damage to the product caused by transactions performed by unauthorized persons.

- Before assembly, please note that the connection lines are made correctly and completely.

 
 


- Before starting the device for the first time, remove the protective nylon on the device, first wipe it with a damp and then dry cloth.

- Place under the hood to remove smoke and odor that may occur during the cooking process.

- Children and uninformed people should not be allowed to use the device.

- See that the device is in balance by measuring it with water balance.

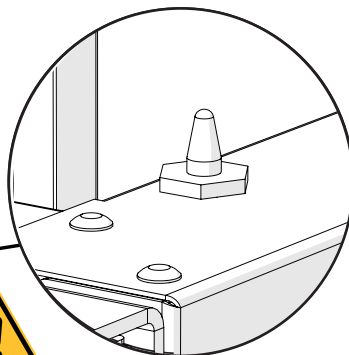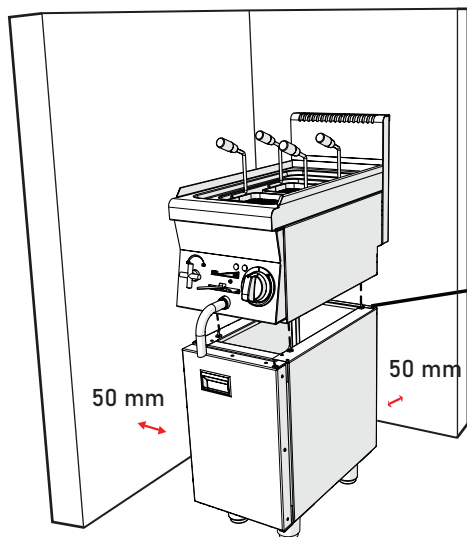

Make sure that the set pins sit in the slot.

Leave a sufficient distance between the device and the walls.

 
If the set pins countertops will not be used, install the feet coming out of the box.




* Direct connection must be made to the water inlet from the water line.


* Do not operate without water.

Operation and use

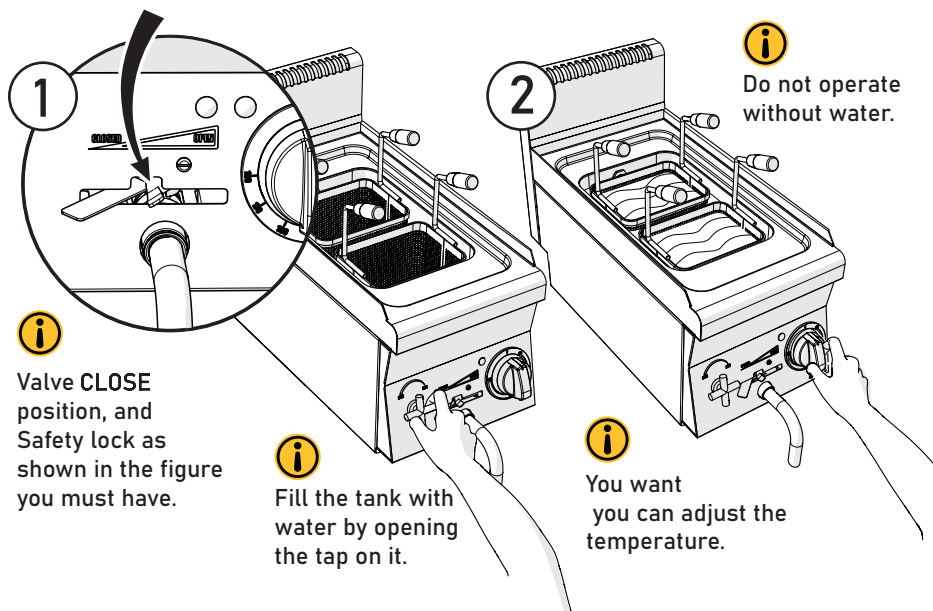

  - You can rotate the heat slider clockwise and adjust it to the desired temperature.
- You can turn off the device by moving it to "0" to turn it off.

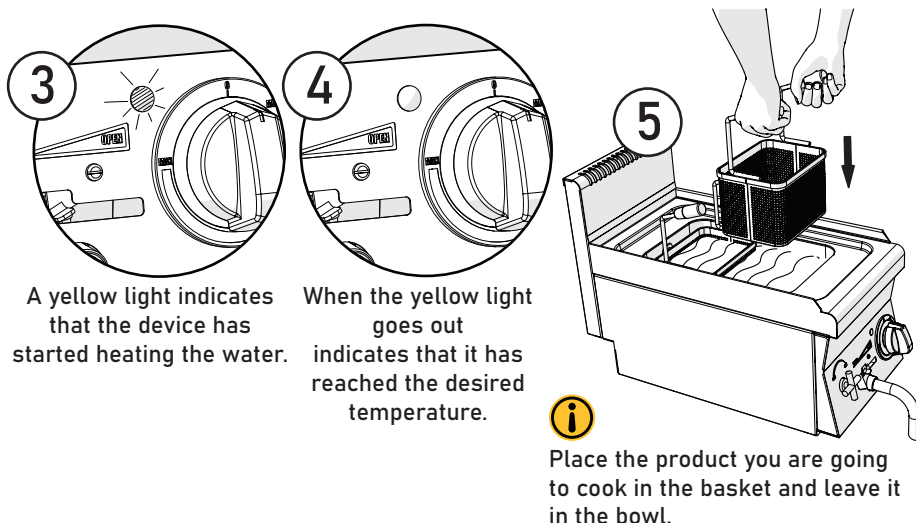

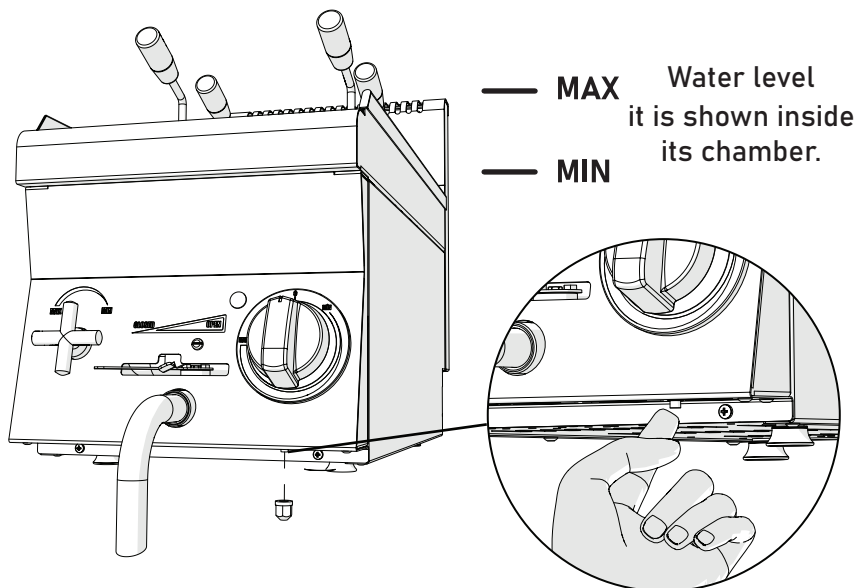

- E AMP-360 water capacity 12 Lt
- E AMP-460 water capacity 15 lt
- E AMP-660 water capacity 25 lt

 


 
- When the water temperature rises above 126°, the safety thermostat disconnects the electrical circuit. After cooling, you can make the safety thermostat work again by pressing the button so that the device can work again.

Attention: if you are constantly using this button, be sure to call the service.




- In case of excess water entering the chamber, the overflow will flow through the drain part.

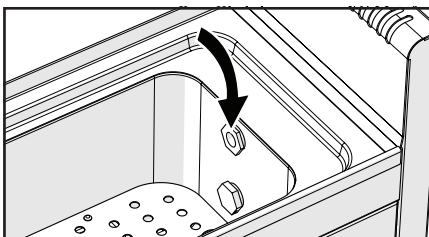

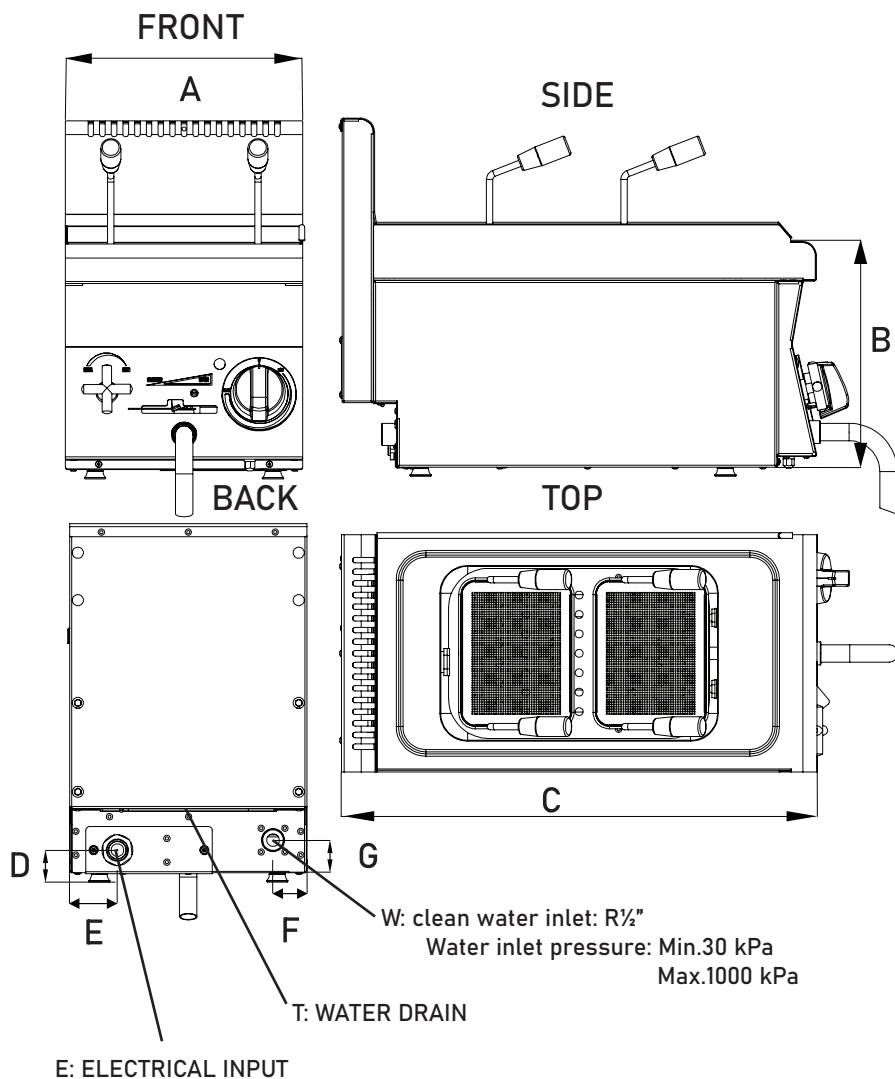


PRODUCT CODE	A	B	C	D	E	F	G
E AMP-360	300 mm	600 mm	300 mm	30 mm	60 mm	40 mm	42 mm
E AMP-460	400 mm	600 mm	300 mm	30 mm	60 mm	40 mm	42 mm
E AMP-660	600 mm	600 mm	300 mm	30 mm	60 mm	40 mm	42 mm

 Feet can be worn and removed. When the device is taken with the set-six bench, it is attached to the seat pins provided next to the set-six bench instead of the foot and sits on the set-six bench.

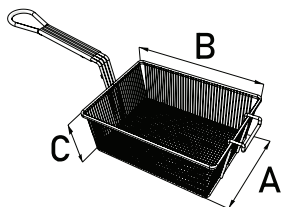


MODEL	A	B	C	Piece
E AMP -360	138	138	130	2
E AMP -460	136	126	130	4
E AMP -660	146	191	130	3

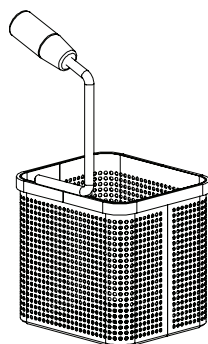 


4 pieces

 E AMP-360

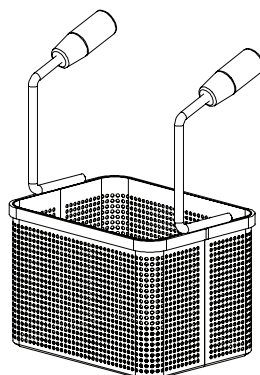


2 pieces

 E AMP-460

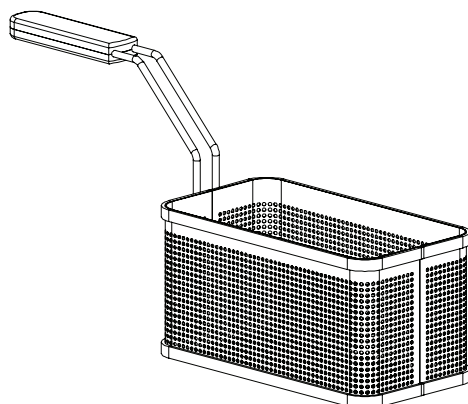


3 pieces

 E AMP-660

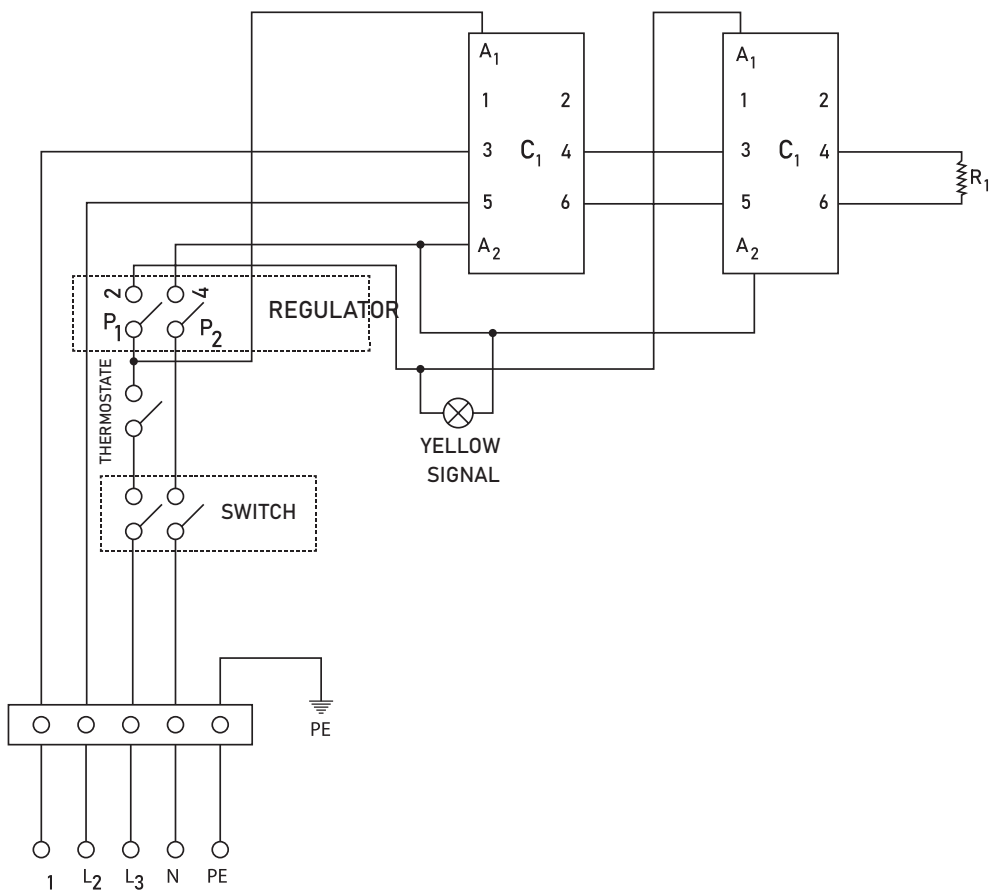

- The device must be connected to the electrical installation in accordance with the electrical standards of the country you are using.
- Make the device's ground line over a suitable auto fuse and secure it in a place where you can easily access it. Connect your fuse according to the values in the table.

 E AMP-660

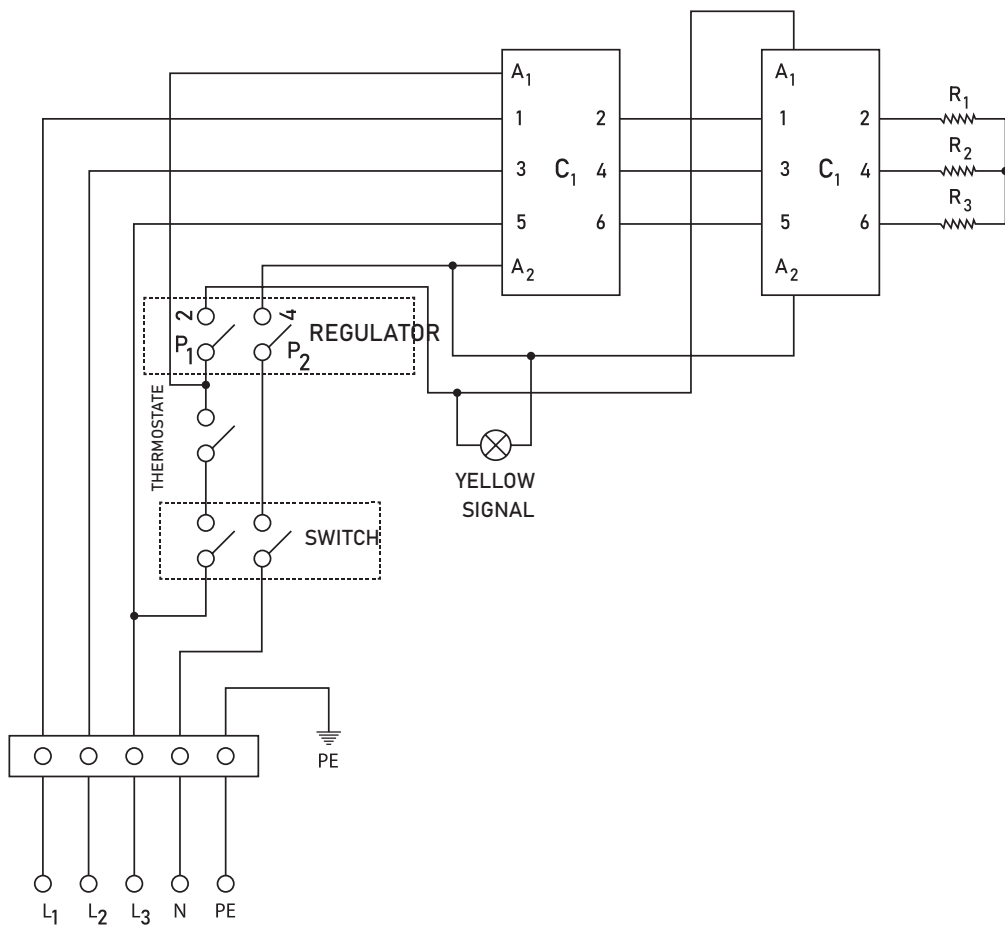

Product Code	Power	Supply voltage and operating frequency	Cable Cross Section H05RR-F	Insurance
E AMP-360	3.5 KW	400 V AC 3N~ PE	5x2, 5 mm	16 Amp
E AMP-460	5 KW	400 V AC 3N~ PE	5x2, 5 mm	10 Amp
E AMP-660	7.5 KW	400 V AC 3N~ PE	5x2, 5 mm	16 Amp



- The feed is manufactured with wireless and without plug.
- The cable section values given apply to the installation and this device.
- Ground line and leakage current relay must be present in the electrical installation to be pulled.
- The withdrawal of the electrical installation belongs to the customer.
- The cable must be drawn so that it can be reached to the electrical panel.

 
What you will pay attention to before cleaning and maintenance.




- Turn off the main supply electrical connection before cleaning the device. Wait for the device to cool down.
- Absolutely do not maintain the device when there is electricity on it.
- Wipe the device with a cloth soaked in warm and soapy water.
- Acid-containing chemicals should not be used during cleaning on the stainless surface of the device.
- Never clean your device with pressurized water or pressurized steam. Otherwise, you may cause failure of the resistance and electrical Assembly.
- Do not leak water through the vents while cleaning the device.
- Notify the Authorized Service if a dangerous situation occurs on the device.
- Drain waste water at regular intervals with the help of a drain fountain. Clean the waste accumulated in the cooking chamber of the device.
- If the device is not to be used for a long time, the surfaces should be covered with a thin layer of Vaseline.
- For cleaning stainless steel, do not use General steel abrasives, scrubbing pads, brushes, or detergent products containing abrasives.




ATTENTION
When the
water's hot
Do not
evacuate.

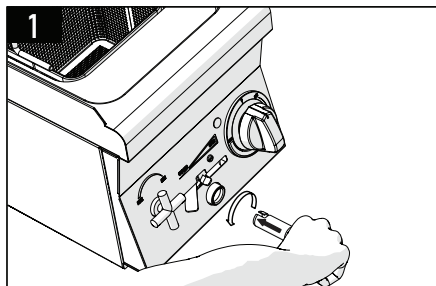


Install the water drain pipe.

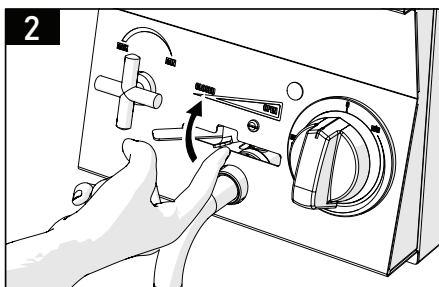 


Lift the safety lock upwards.

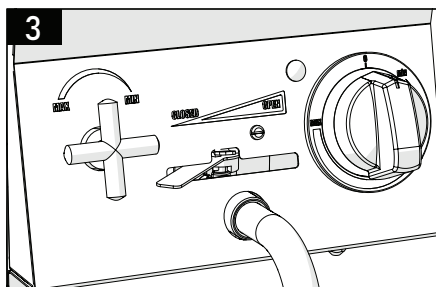 

Place container in **CLOSE** position

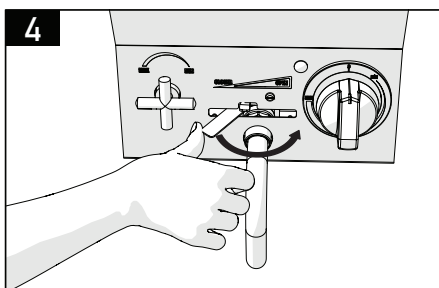 


Pull to **OPEN**.

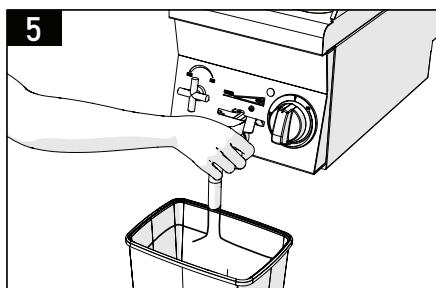 


The Water Discharge.



 
- Move to the **OPEN** position and drain the cooling water.
- Do not use corrosive chemicals and steel cleaning materials when cleaning.

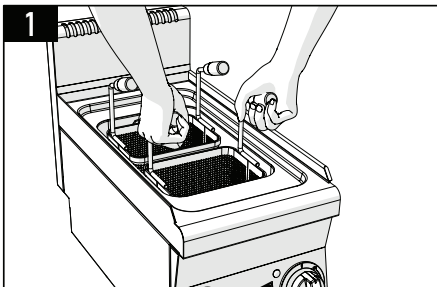

 
Let's get the baskets out and clean them up.

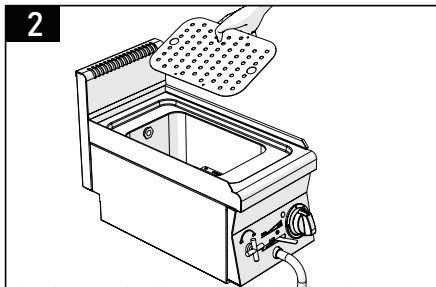

 Let's get the bottom of the basket out and clean it up.

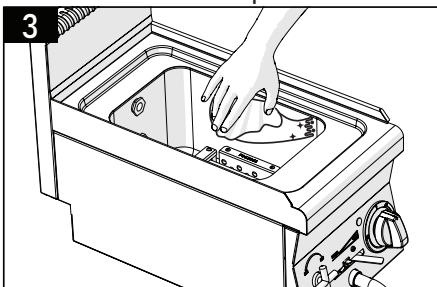

 Let's clean the water tank with soapy water.

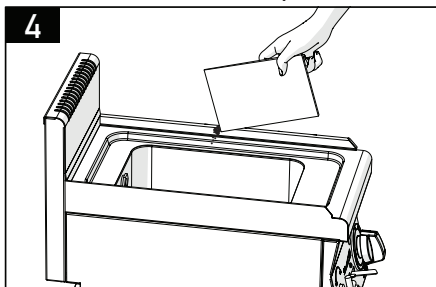


You can use resistance lime cleaner.



- Resistance failures caused by lime in the water are not covered by the warranty.
- Resistance should be used according to the instructions of the products used for Lime cleaning improper use is not covered by the warranty.

 Spare Parts List

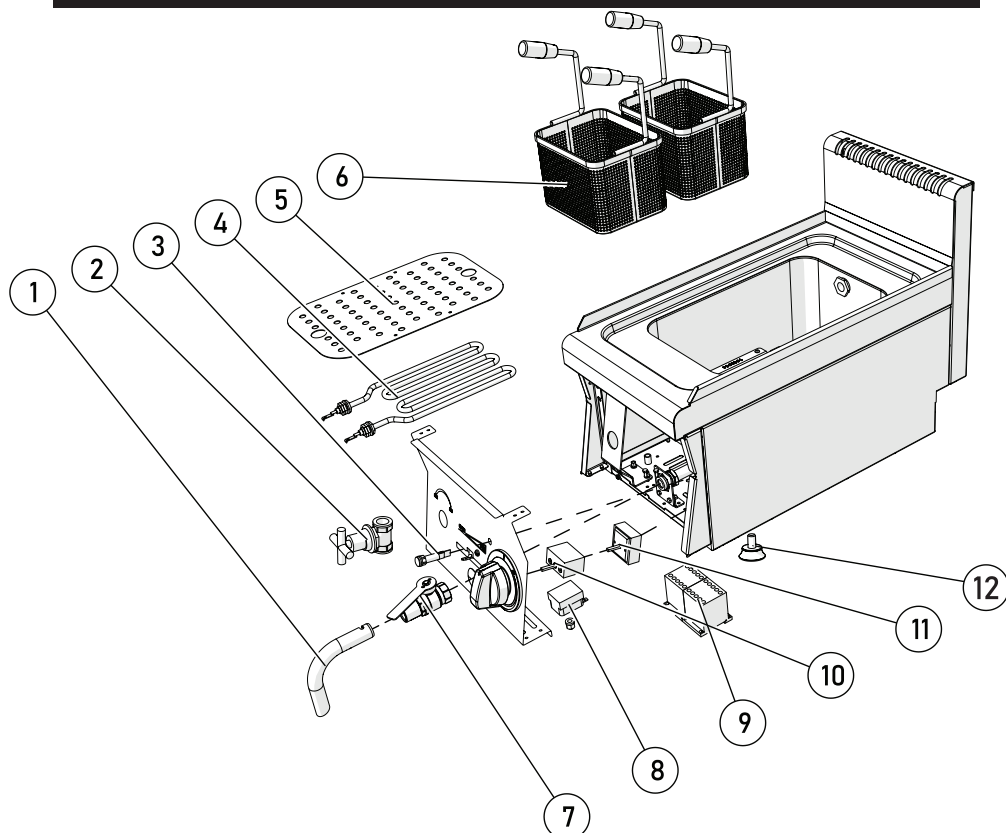

NO	PART NO	DESCRIPTION
1	P000819	Drain Pipe
2	P063085	Water inlet tap
3	P001508	Signal Light Yellow
4	P067422	Amp-360 resistance
4	M020153	Amp-460 resistance
4	P063052	Amp-660 resistance
5	M020958	Basket under AMP-360
5	P063164	Basket under AMP-460
5	P063090	Basket under AMP-660

NO	PART NO	DESCRIPTION
6	M024282	AMP-360 basket
6	M024307	AMP-460 basket
6	M024205	AMP-660 basket
7	M015821	Water discharge valve
8	P063220	Limit Thermostat 126°
9	P000808	Contactor
10	P017145	Switch
11	P001490	Regulator
12	P000205	Foot